

* Regarding the use of this software, SUGISAKI METER CO.,LTD does not warrant about any troubles, losses and damages any-and-all.

How to operate

(1) After connecting the torque tester and your PC, launch the “W-Series DataInput v1.0 (J).xslm”, then enable the macro.

(If be not connected to the tester, close this file automatically because it's error.)

(2) Input the COM port number to "COM No".

If click the port which you use from the COM port list, it's set up the COM port number to "COM No" automatically. If it's not set up correctly, type directly.

(3) Select "Type of input data", click "Communication".

Regarding the relation of "Type of input data" and the measurement mode, it's as follow.

NORMAL	Peak hold (PP), Peak down (PD), Memory data, Statics data
C-MODE	Real time output (C)

(4) If clear the measurement result, take in the data. Also, take in the data, if click "Clear" on the application, too.

* In the Real time output (C) mode, it differ how to take in the data.

(5) If close this application, click “Exit” after click “Stop the communication”.

If make a graph by the data which is taken in, click "Graph".

If save it, click “save the graph”, then type the any file name.

